

# Repair Parts for Check-Mate<sup>®</sup> 60cc Displacement Pumps

312889D

With priming piston and Severe Duty® or MaxLife® rod and cylinder.



See manual 312375 for complete disassembly and reassembly instructions.

# KEY: ↑ Torque to 85-95 ft-lb (115-128 N•m) A Torque to 28-44 ft-lb (38-59 N•m) **⚠** Torque to 213-287 ft-lb (288-387 N•m) A Torque to 43-47 ft-lb (58-63 N•m) ∱ Torque to 34-38 ft-lb (45-51 N•m) Torque to 26-30 ft-lb (35-41 N•m) ↑ Torque to 90-130 ft-lb (122-173 N•m) A Torque to 44-62 ft-lb (60-84 N•m) Apply thread sealant Throat Packings P: S: Intake Valve Packings T: Piston Check Valve Assembly (includes 23) P (5-8) Lubricate all soft seal components before P (5-7) installation. з 🕭 `24 <u>\$</u> 16 61 <u></u> 43 38 ⇘ 39 40 0 S (34-37) R (32-37) 17<u>3</u> `9 🛕 28 🙆 31 30 🖄 TI12644B

# **Parts**

Ref.	Part	Description	Qty.	Ref.	Part	Description	Qty.
		-	_	25		GUIDE, piston	1
1	★※23/330	KIT, rod, displacement; chrome	1		<b>*≭</b> 15U598	GUIDE, piston; sst	1
	σ <b>⇔</b> 0Ε7Ε01	(includes 18, 21)	4	26	<b>★</b> ±184051		1
	₩₩23/331	KIT, rod, displacement; MaxLife	1			PISTON; sst	1
0	±∞055604	(includes 18, 21)	4	27		NUT, shovel	1
2	★母255604	KIT, housing, outlet, (150 mm)	1	00		NUT, shovel; sst	1
	vt•⇔0E7E61	(includes 18, 21, 44, 47, 49, 52)		28		GUIDE, piston	1
	<b>*</b> ₩∠5/501	KIT, housing, outlet, (150 mm);		004	<b>*≭</b> 15U589	GUIDE, piston; sst	1
		sst (includes 18, 21, 44, 47, 49,		29‡		BEARING, guide	1
0	A 314 E1/7E4	52)	4	30‡		SEAT, piston	1 1
3		CARTRIDGE	1	31‡ 32‡		SEAL, piston VALVE, intake	1
4+		CARTRIDGE; sst	1 1	33‡		NUT, packing	1
4‡ 5‡	104301	O-RING, cartridge	1	34‡		GLAND, male, piston;	1
5+	<b>*</b> **	GLAND, packing female;	'	044		see Packing Kits	'
	<b>⊞</b> ★	see Packing Kits		35‡		PACKING, UHMWPE;	2
	<b>~</b>	GLAND, packing, u-cup;		004		see Packing Kits	_
6+	<b>→</b> ×t×	see Packing Kits	3	36‡	₩₩	PACKING; leather;	2
6‡	<b>★</b> ₩	V-PACKING; UHMWPE;	3	304	<b>2.4</b>	see Packing Kits	_
	<b>⊞</b> ★	see Packing Kits	1		<b>★</b> ₩	PACKING, PTFE;	2
	Φ₩.	SPACER, u-cup;	'		A 45	see Packing Kits	_
7+	<b>★</b> ≉	see <b>Packing Kits</b> V-PACKING; PTFE;	2	37‡		GLAND, female, piston;	1
7‡	<b>★</b> 🌣	see Packing Kits	2	07+		see Packing Kits	
	<b>⊞</b> ★	SPACER, u-cup; acetal;	1	38‡		SEAL, valve	1
	Δ.	see Packing Kits	'	39‡		HOUSING, valve	i
8‡	<b>★</b> ≉		1	40‡		PLUG, valve	i
0+	<b>★</b> 🌣	GLAND, packing male; see <b>Packing Kits</b>	'	41‡		HANDLE, outlet bleed	i
0+	<b>⊥</b> ×t×	NUT, packing, open wet cup	1	42‡		CLIP, outlet bleed	1
9‡	★* • <b>*</b>	CUP, wet, enclosed	i	43	<b>★</b> ⊕184037	FITTING, outlet	1
10‡	<b>⊞</b> ¥	COVER, wet cup	i			FITTING, outlet; sst	1
11‡	<b>±≭</b> 161446		•	44‡		O-RING	1
12‡	<b>₩</b>	SIGHTGLASS	1	47▲	184090	LABEL, warning	1
13‡	⊕ <b>★</b>	COVER, oil hole	1	48▲	184151	LABEL, warning	1
14‡	<b>#</b>	SCREW, socket hd cap; M5 x 12	2 3	49		SCREW, drive	7
15‡	⊕ <b>≭</b>	WIPER, wet cup cover	1	50▲		TAG, instruction, safety	1
16‡	<b>⊕</b> ¥	SEAL, wet cup cover	1	51‡	⊕ <b>≭</b>	PLUG, pipe	1
17‡	<b>★</b> 攀	CYLINDER, pump	1	52‡	197561		1
	⊕ <b>≭</b>	CYLINDER, pump, MaxLife		61‡	Α <b>≭</b>	RING, retaining	1
18‡	109205	O-RING	2				
19		HOUSING, valve	1	<b>★</b> N	lodel L060C	S only.	
	<b>*≭</b> 15U586	HOUSING, valve; sst	1	<b>*</b> ∧	odel L060S	Sonly	
20‡		SEAT, intake	1			•	
21‡		SEAL	1	₽ N	1odel L060Cl	M only.	
22	<b>★</b> ₹255610	KIT, intake housing, cylinder	1	<b>*</b> N	lodel L060SI	Monly	
		(includes 21, 48, 49)		<b>→</b> 10	IOGEI LUUUSI	vi Oiny.	
	<b>*≭</b> 257560	KIT, intake housing, cylinder; sst	1	‡ S	ee <b>Kits</b> table	e on page 4.	
		(includes 21, 48, 49)			Pontoomort	Dangar and Warning Johala tage	and
23‡	4 .4.	SEAT, piston	1		•	Danger and Warning labels, tags,	anu
24‡		ROD, piston	1	C	aras are avai	ilable at no cost.	
	<b>⊞</b> ₩	ROD, piston; MaxLife					

312889D 3

# Kits

The following table indicates which parts (according to reference number) are included in each kit.

																Ref	ere	nce	e Nu	ımb	oers	<u> </u>														
Kit	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	20	21	23	24	29	30	31	32	33	34	35	36	37	38	39	40	41	42	44	51	61
255507	~	~	~	1	~										~		~			~		~			~	~	~	~	~					~		
256866	~	~	~	~	~										~		~			~		~			~	~	~	~	~					~		П
255508	~	~	1	~				1				1	1		~		1			~		~			1	1	~	~	~					~		~
256867	~	~	1	~				1				~	~		~		~			~		~			1	~	~	~	~					~		~
255523	~	~	~	1	~																															
255524	~	~	~	~				~				~	~																					П		~
255533															~		~			~		~														
255539																	~								~	~	~	~	~							
256865																	1								1	1	~	~	~							
255540																	~		Г						~	~	~	~	~					П		П
256868																	~								~	~	~	~	~							
255551															~		~	~		~	~	~												П		
257557															~		~	~		~	~	~														
255557																~	1						~	1	1	1	~	~	~							
256869																~	~						~	~	1	~	~	~	~							
255558																~	~						~	~	~	1	~	~	~							
256870																~	~						~	~	~	~	~	~	~							
255577															~		~		~						~	~	~	~	~							
256871															~		1		~						1	~	~	~	~							
255578															~		~		~						~	1	~	~	~							
256872															~		~		~						1	~	~	~	~							
257532														~	~		1			~		~														
257533														~	~		1			~		~														
237908																														~	1	~	~			
255616																														~	~	~	~			
255618								~				~	~																							~
255696	~	~	~	~		~	~	~	~	~	~	~	~																						~	~
257559	~	~	~	~		~	~	~	~	~	~	~	~																						~	~
16F205	~	~	~		~										~		~					~			~	~		~	~					~		

4 312889D

### **Kit Descriptions**

Kit	Description
255507	Complete Seal Kit; Severe Duty, L060CS
256866	Complete Seal Kit; Severe Duty, L060SS
255508	Complete Seal Kit; MaxLife, L060CM
256867	Complete Seal Kit; MaxLife, L060SM
16F205	Complete Seal Kit; PTFE Alternative; includes all PTFE Alternative kits listed under <b>Packing Kits</b> , page 6
255523	Throat Seal Kit; Severe Duty, L060CS and L060SS
255524	Throat Seal Kit; MaxLife, L060CM
257558	Throat Seal Kit; MaxLife, L060SM
255533	Piston Seal Kit
255539	Intake Kit; Severe Duty, L060CS
256865	Intake Kit; Severe Duty, L060SS
255540	Intake Kit; MaxLife, L060CM
256868	Intake Kit; MaxLife, L060SM
255551	Piston Seal Metal and Soft Kit CS and CM
257557	Piston Seal Metal and Soft Kit SS and SM
255557	Intake Valve Seal Metal and Soft Kit; Severe Duty, L060CS
256869	Intake Valve Seal Metal and Soft Kit; Severe Duty; L060SS
255558	Intake Valve Seal Metal and Soft Kit; MaxLife, L060CM
256870	Intake Valve Seal Metal and Soft Kit; MaxLife, L060SM
257530	Displacement Rod Kit; Severe Duty, L060CS and L060SS; see page 3 for parts included in kit
257531	Displacement Rod Kit; MaxLife, L060CM and L060SM; see page 3 for parts included in kit
255577	Priming Piston Rod Kit; Severe Duty, L060CS
256871	Priming Piston Rod Kit; Severe Duty, L060SS
255578	Priming Piston Rod Kit; MaxLife; L060CM
256872	Priming Piston Rod Kit; MaxLife, L060SM
257532	Cylinder Kit; Severe Duty, L060SS and L060CS
257533	Cylinder Kit; MaxLife, L060SM and L060CM

Kit	Description
255604	Outlet Kit, L060CS; see page 3 for parts included in kit
257561	Outlet Kit, L060SS; see page 3 for parts included in kit
255610	Intake Cylinder Kit, L060CS; see page 3 for parts included in kit
257560	Intake Cylinder Kit, L060SS; see page 3 for parts included in kit
237908	Bleed Valve Kit; CS
255616	Bleed Valve Kit; SS
255618	Enclosed Wet Cup Seal Kit, MaxLife; L060CM and L060SM
255696	Enclosed Wet Cup Kit; MaxLife, CS
257559	Enclosed Wet Cup Kit; MaxLife, SS

312889D 5

# **Packing Kits**

#### **Throat Packings**

#### **Severe Duty**

Ref		Description	Qty.
5	$\bigstar$	GLAND, packing female; cs	1
	**	GLAND, packing, female; sst	1
6		V-PACKING; UHMWPE	3
7		V-PACKING; PTFE	2
8	$\bigstar$	GLAND, packing male; cs	1
	₩₩	GLAND, packing male; sst	1


#### **MaxLife**


Re	f.	Description	Qty.
5		SEAL, u-cup	1
6	★⊞	SPACER, cs	1
	₩₩	SPACER, sst	1
7		SPACER, acetal	1

#### **Severe Duty**

## MaxLife


\* Lips face down \* Lips face down

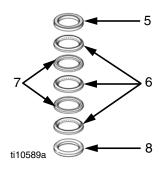



#### **PTFE Alternative**

Ref.	Description	Qty.
5	GLAND, packing, female	1
6	V-PACKING, PTFE	5
8	GLAND, packing, male	1

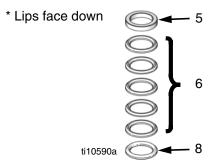


#### **Intake Valve Packings**

#### Severe Duty and MaxLife


Ref		Description	Qty.
34		GLAND, male, priming piston; cs	1
	**	GLAND, male, priming piston; sst	1
35		PACKING; UHMWPE	2
36	<b>★</b> ≉	PACKING; PTFE	2
	<b>⊕</b> ★	PACKING; leather	2
37		GLAND, female, priming piston; cs	1
	₩₩	GLAND, female, priming piston; sst	

- ★ Model L060CS only.
- Model L060SS only.
- Model L060CM only.
- \* Model L060SM only.

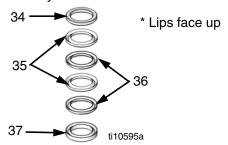

#### **PTFE Alternative**

Ref.	Description	Qty.
34	GLAND, male, priming piston	1
35	PACKING, PTFE	4
37	GLAND, female, priming piston	1

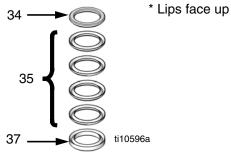

#### **Piston Packings**

#### **PTFE Alternative**

Ref.	Description	Qty.
31	SEAL, piston	1

All written and visual data contained in this document reflects the latest product information available at the time of publication.

Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 312889

Graco Headquarters: Minneapolis International Offices: Belgium, China, Japan, Korea